Enter User

menu

Press

"29"

Did you hear "PLEASE RECORD

Yes

Record your name and

address by speaking

clearly into the phone.

Press # when finished

Programmed

OK

You are still in

user menu See page 1 to

leave the menu.

VOCALISER

QUICK USER INSTRUCTIONS

1. INTRODUCTION

Entering the User menu

SECURITY CODE"

Yes

Yes


You are now in the user menu

This leaflet describes how to program a vocaliser to dial a programmed set of telephone numbers, and record a set of audio messages. It assumes that you do not want to implement any of the more advanced features, and just want a standard voice dialler type product. The more advanced features are listed and described in the user instruction booklet. It assumes that the engineer has already connected up and programmed the vocaliser correctly.

Leaving the User menu

PLEASE WAIT"?

Yes

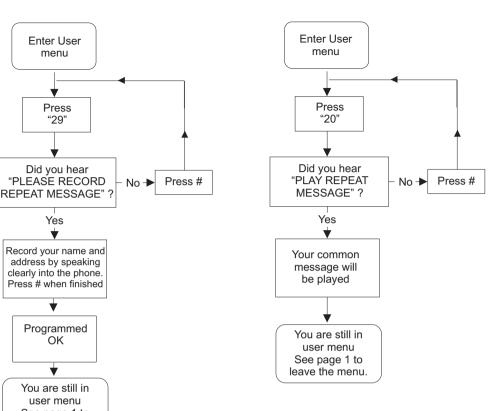

Lift the Whilst in the programming User mode phone handset Press Press "00" any key Did you hear "END Did you hear "PLEASE ENTER Press # OF MENU, OFF, No → No →

Replace the Enter your security telephone code handset (Your default code is 1234) You have now Did it say No → Press # **BEEP** left the User "MENU" menu

> Date: Oct1996 RDOC: RDOC391 Issue:

Press #


Page 4


Page 1


Playing back the common message


Entering the trigger message

Playing back the common message

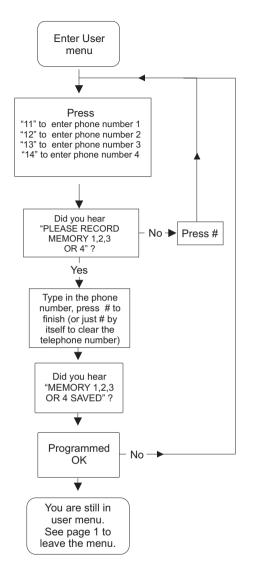

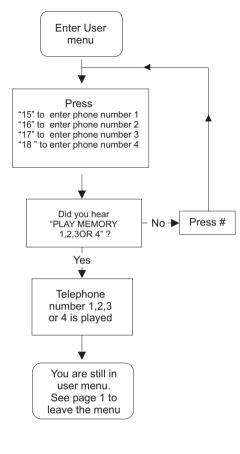

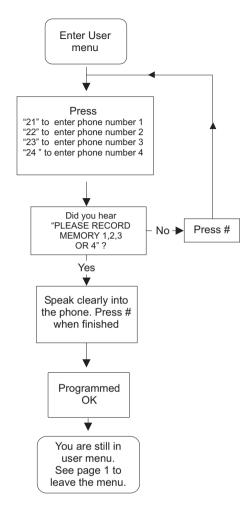

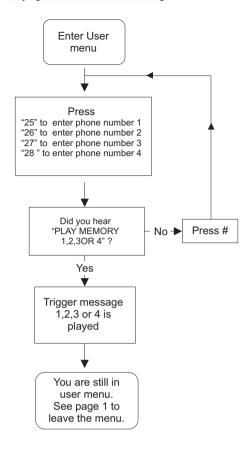

Page 2